

**"EASY LIGHT" SERIES FOR NON MAINTAINED / MAINTAINED
EMERGENCY LUMINAIRES**



TECHNICAL CHARACTERISTICS <i>(for LED MODULE specifications see page 5)</i>	GR-310/15L	GR-312/15L
OPERATION VOLTAGE	220-240V AC/50-60Hz	
MAXIMUM POWER CONSUMPTION	3W /3.2VA	3,2W /3,4VA
BATTERIES (Ni-Cd)	3,6V/600mAh	3,6V/1,5Ah
BATTERY PROTECTION	From overcharge and full discharge	
INDICATIONS - CONTROLS	Battery charging LED, TEST button	
CHARGING TIME	24h	
MINIMUM AUTONOMOUS DURATION	90min	180min
ILLUMINATION SOURCE	15 white LED's	
EMERGENCY ILLUMINATION	125lm	
DEGREES OF COVER PROTECTION	IP40	
PRODUCED IN ACCORDANCE WITH	EN 60598-1, EN 60598-2-22, EN 55015, EN 61547, EN 61000-3-2, EN 61000-3-3	
OPERATION TEMPERATURE RANGE	5 to 40 °C	
RELATIVE HUMIDITY	Up to 95%	
CONSTRUCTION MATERIALS	Bayblend FR3010, transparent polycarbonate	
EXTERNAL DIMENSIONS	350 x 134 x 45 mm (CRV 362 x 134 x 58 mm)	
TYPICAL WEIGHT	655gr.	735gr.
GUARANTEE	3 years (1 year for the battery)	

**Thank you for your trust in our products.
Olympia Electronics - European manufacturer.**

GENERAL

These luminaires are used indoors (ta 40°C) where emergency light is needed.

Each luminaire must be permanently connected to mains power supply.

In normal operation the battery is charging and the led strip light in the screen.

In case of a mains power supply failure the luminaire will light the led strip automatically in emergency mode. When the mains power supply is restored the device turns to normal operation.

MAINTAINED / NON MAINTAINED OPERATION

There is an option to select the maintained or non-maintained operation by placing the jumper to the appropriate place according to step 8 (page 4).

INSTALLATION

To install the luminaire follow the installation instructions on page 4.

ATTENTION!!!

1. Operations for installation, maintenance or testing must be done by authorized personnel only.

2. The device must be connected to the mains power supply through a fuse dependent by the total amount of the line's power load.

3. It is suggested to check every month the indication LED for battery charging, and by pushing the TEST button to check the emergency circuit. The led strip should: a) light with bigger intensity as long as the TEST button is pressed (maintained operation), b) light as long as the TEST button is pressed (non-maintained operation). If the luminaire doesn't work as described above contact the installer.

4. It is suggested to check every 6 months the minimum autonomous duration by disconnecting the mains power supply. Count the time that the led strip lights and in case of less time than the minimum autonomous duration the battery must be replaced. If the measured time is considerably less than the minimum autonomous duration contact the installer. In case of battery or led strip replacement, these must be replaced by parts of the same type, by the manufacturer or by a competent person.

5. In case of inactive use for a period greater than 2 months, disconnect the battery by pulling out the battery's connector.

6. **It is not allowed to discard batteries in to common trash bins, they must be discarded only in battery recycling points. Do not incinerate.**




MARKING PANEL SP-114

A marking panel SP-114 can be installed on the luminaire in 3 different locations. This marking panel is installed perpendicular to the diffusor of the luminaire, as shown in the pictures below. The panel is pre-printed and has a plastic accessory on each side that is used to fasten the panel to the luminaires. There are 2 arrow stickers that can be placed in each side of the marking panel to point to the desired direction.







Placing the SP-114 marking panel

Place the plastic mounting accessories of the marking panel as shown in pictures.

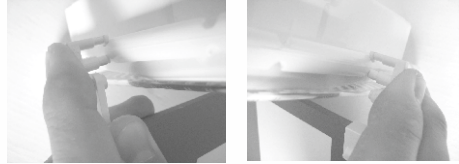

NOTE!! This marking panel (SP type) can not be installed on CRV luminaires.

Installation methods

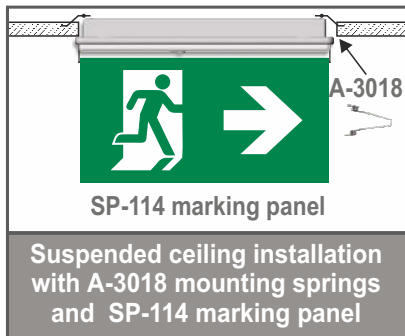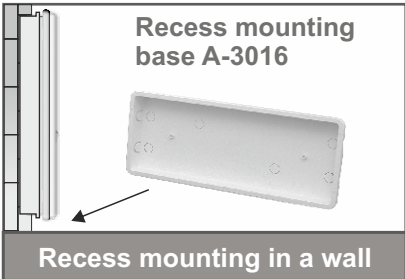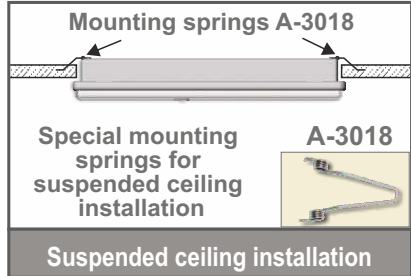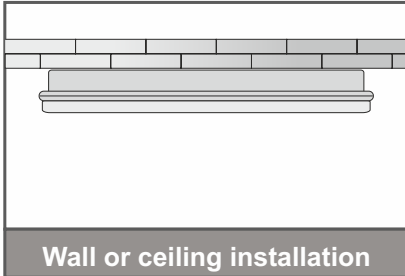

Mounting methods

All "Easy Light" can be mounted either surface or recess mounted in walls or suspended ceilings. For recess mounted installations, special accessories are required which can be found in the catalog and must be ordered separately.

Suspended ceiling installation.

On the bottom of the base plastic of the Easy light luminaire there are two H shaped cut outs. These are used to install the A-3018 mounting springs.

Note! The luminaire is not suitable for mounting on tubular materials or surfaces.

1. With a sharp tool remove the appropriate plastic pieces to fit the mounting springs. First place the edges of the mounting spring to the respective holes and install the one end of the coil to the support axis.

2. Install the other end of the coil to the other support axis.

3. Bend the springs and place the luminaire to the respective suspended ceiling's hole.

The luminaire's placement to the suspended ceiling must be done after the connection with power supply cables.

Recess mounting in a wall

The special mounting base (A-3016) can be built in the wall and on it can be mounted the luminaire with the A-3016 included screws, following the installation instructions of the luminaire. The mounting base contains pre-etched holes for cable entry that are aligned with the cable entry holes of the luminaire.

PLACING A-CRV PARTS

To install the curve crystal **A-CRV** you must first install the included plastic extension to mount it on the TEST button.

NOTE: LED= Light Emitting Diode

LABELING EXPLANATION:

X: Self contained

1: Maintained (*)

A: Including test device

G: Internally illuminated

***90:** 1.5 hour duration







180: 3 hour duration

*All the types of **Easy Light** series, are also produced with a new designed crystal with **GR-XXX/CRV** code, for example **GR-310/15L/CRV**.*







Note!! The installer should fill in, on the specification label, the letter **G** if the luminaire is used as a safety sign.

X 1 A G * 9 0

(*) **Non Maintained operation:** The luminaire lights its illumination source, only in power supply's failure.
Maintained operation: The luminaire lights its illumination source, when it is powered by the mains power supply or not.

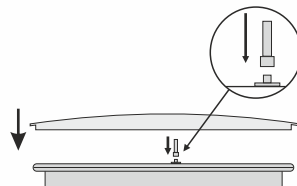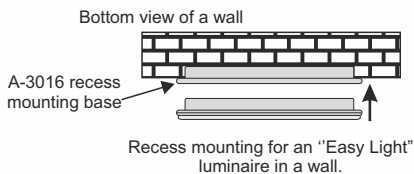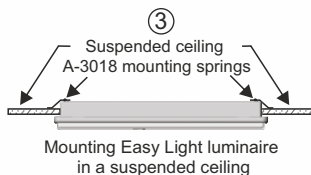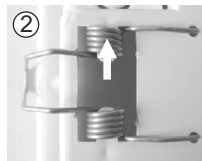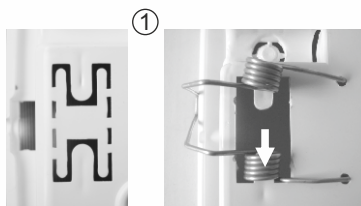

INSTALLATION INSTRUCTIONS

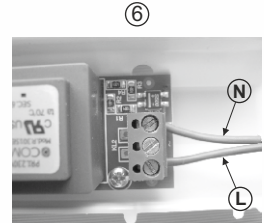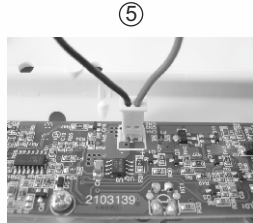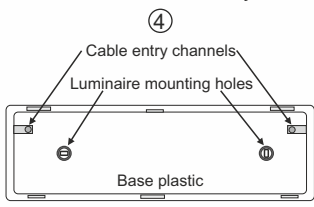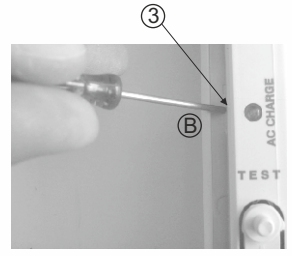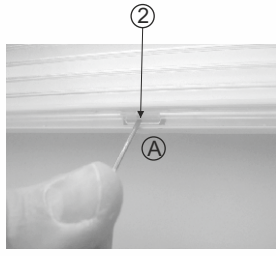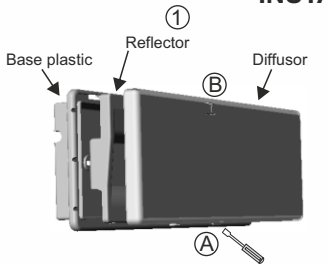


- ① To install the luminaire you must dismantle it to 3 parts.
- ② Place a flat blade screwdriver in the area **A** to release the diffuser's plastic hook.
- ③ Place a flat blade screwdriver in the area **B** to release the reflector's plastic hook.
- ④ Use the included mounting parts to mount the base plastic.
Pass the mains cable through a cable entry channel. The luminaire must be connected to a permanent electrical installation to ensure the immobilization of the cable.
- ⑤ Place the battery's connector to the corresponding connector on the P.C.B.
- ⑥ Connect the mains cables to the respective detachable terminal block. **N for neutral** and **L for live wire**.
- ⑦ Refit the removed parts in steps 2 and 3 (mind the correct orientation) and the luminaire is ready to operate.

8. MAINTAINED/NON-MAINTAINED OPERATION JUMPER SELECTION

You can choose the luminaire's operation. When the jumper is installed (by default) in the middle and right pins *maintained operation is selected*.
When the jumper is installed in the middle and left pins *non-maintained operation is selected*.

NOTE!! After finishing the installation you must power the device at least for 24 hours for battery charging to perform the Nominal autonomy.

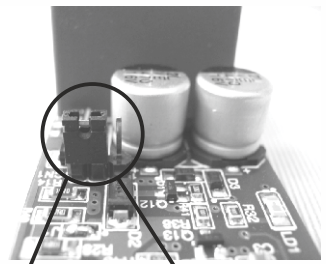

Battery replacement.

It can be done only by a competent person and after the mains interruption.

1. Follow the step 2 and 3 of the installation procedure.
2. Disconnect the connector and remove the old battery.
3. Connect the new battery with the same type (step 5 of the installation procedure) and place it in the position of the old one.
4. Follow the step 7 of the installation procedure and power the device.

LED MODULE CHARACTERISTICS

	GR-310/15L	GR-312/15L
Manufacturer	Olympia Electronics S.A.	
Model Number	0506163	
Voltage Range	2.9-3.6V DC	
Nominal Power	980mW	
Connections	Cable connection between main pcb and led module	
Temperature (tc)	47 °C max. across the board	



The light source contained in this luminaire shall only be replaced by the manufacturer, or his agent, or a similar qualified person.

NOTE! The light source is non-user replaceable.

WARRANTY

Olympia Electronics guarantees the quality, condition and operation of the goods. The period of warranty is specified in the official catalogue of Olympia Electronics and also in the technical leaflet, which accompanies each product. This warranty ceases to exist if the buyer does not follow the technical instructions included in official documents given by Olympia Electronics or if the buyer modifies the goods provided or has any repairs or re-setting done by a third party, unless Olympia Electronics has fully agreed to them in writing. Products that have been damaged can be returned to the premises of our company for repair or replacement, as long as the warranty period is valid. Olympia Electronics reserves the right to repair or to replace the returned goods and to or not charge the buyer depending on the reason of defection. Olympia Electronics reserves the right to charge or not the buyer the transportation cost.

HEAD OFFICE

72nd km. O.N.R. Thessaloniki-Katerini
P.C. 60300 P.O. Box 06 Eginio Pierias Greece
www.olympia-electronics.gr
info@olympia-electronics.gr